 
## **FURNITURE KNOB**

1. Drill holes.

**2.** Attach knob to door with screw.




## Contents

2x M4 x 25 mm screw\*

\*Fits doors & drawers of max 16 mm.

# FURNITURE KNOB / PLATE

- **1.** Pre-drill holes to prevent cracks. Drill template available to download from busterandpunch.com.
- **2.** Attach handle to door with countersunk screws.
- **3.** Attach coincaps to countersunk screws. Use coinscrew tool to tighten screws.

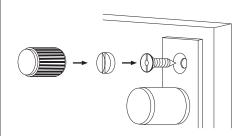

#### Contents

**4x** Countersunk screw\* (+ 2 spare)

4x Coin cap

1x Coin cap installation tool\*\*

- st Fits doors & drawers of 16 mm and thicker.
- \*\* Coinscrew tool must be used by hand only.



**BUSTERANDPUNCH.COM** 

BUSTER + PUNCH

HARDWARE
FURNITURE KNOB

EUROPE INSTRUCTIONS

### **CARE INSTRUCTIONS**

Use mild detergent and soft damp cloth

